

WIFI THERMOSTAT INSTRUCTION MANUAL




CONGRATULATIONS on the purchase of your new WiFi Thermostat from HOTWIRE.

The HWSMWiFi model is an intuitive unit that can even be connected to Google Home or Amazon Alexa.

Table of CONTENTS:
 
| | |
|---------------------------------------|----|
| Installation instructions | 02 |
| Wiring instructions | 03 |
| Thermostat Symbols | 04 |
| Wifi Connection | 05 |
| Essential Settings | 06 |
| function and Operation Settings | 07 |
| Default Programming | 08 |
| Programming KEY | 09 |
| Personalisation and programming | 10 |
| Dimensions | 13 |

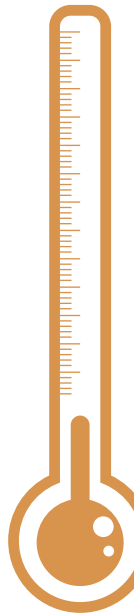

Installation Instructions:

 
Step 1:

Put your fingers either side of the front panel and pull towards you.



Step 2:


Connect the Thermostat according to the Wiring Instructions. (Page 3)

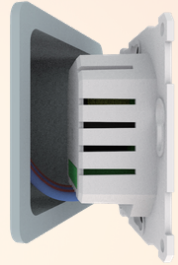

Step 3:

Mount and reassemble the Thermostat:

 Screw the thermostat to the fixing plate in the holes provided.

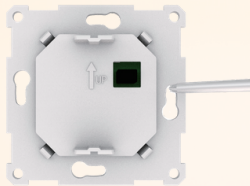


Step 4:

Return the face plate to its original position by pressing firmly.



 
Wiring Instructions

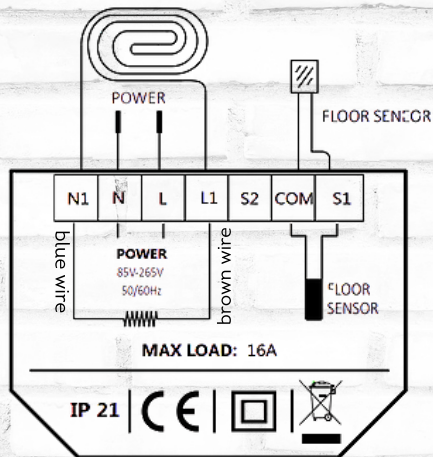

Connect green wire to
house earth

Thermostat Symbols

 When the thermostat has been installed and connected scroll down on the On/Off switch to turn on the thermostat and scroll up to turn Off the thermostat.


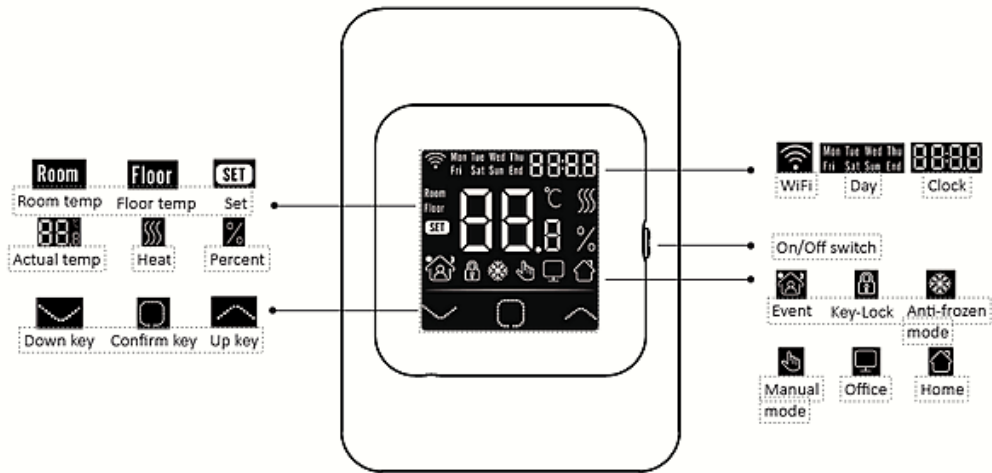


WIFI CONNECTION

Download the “Warmme App”
and register and login as prompted.



  
Click 'Add Device'
or '+' on the top-
right corner to
add device

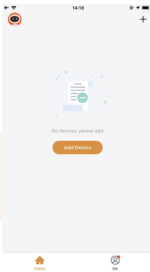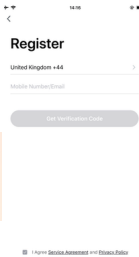


Select 'WiFi
Thermostat'



 Connection
should happen
automatically, if
not click
“Press to connect”

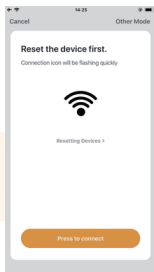


Enter WiFi
Password and
click 'Confirm'

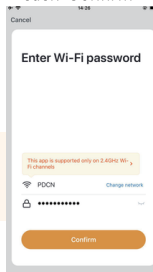 

You should see this
screen.

 At this point you
can press the edit
button and change
the name of the
Thermostat to, for
example,
“Bathroom”

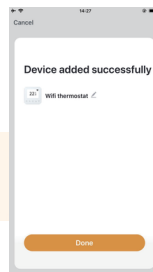


You can now
adjust the
temperature
and program the
unit.



Function and Operation Settings

 Mode



To select the mode press

There are 3 modes you can select from.

Auto Mode (house icon):

The system will run according to your preset settings.

Manual Mode (hand icon):

You can simply turn the system on or off.

Anti Freeze (snowflake icon):


This is not used often in Australia but you are able to simply ensure the floor never gets below a certain temperature. It is useful if you are in the Snow Fields. The maximum temperature for this is 15C

Temporary override Temperature









To override the current settings and turn the unit on Manually simply increase or decrease the Temperature by pressing the up or down arrows. This temperature is a 'once off' event will not be saved.

Lock

To 'lock' the system and its current settings so that visitors or the small people in your life don't change the settings simply press and hold the  and UP arrow at the same time and hold for 3 seconds.

Repeat this process to Unlock

The default programming is as follows

| | Day |  (Wake) |  (Leave) |  (Back) |  (Sleep) |
|--------|---------|--|--|---|---|
| Home | Mon-Fri | 06:00 20.0 °C | 08:30 15.0 °C | 17:00 20.0 °C | 23:00 15.0 °C |
| | Sat/Sun | 06:00 20.0 °C | 08:30 20.0 °C | 17:00 20.0 °C | 23:00 15.0 °C |
| | Day |  (Work) |  (Off work) | | |
| Office | Mon-Fri | 07:00 20.0 °C | 18:00 15.0 °C | | |
| | Sat/Sun | 07:00 15.0 °C | 18:00 15.0 °C | | |

If you wish to change the default programming to suit your needs, follow the steps on pages 9-13

Programming the system

MENU KEY.

 
Instructions to change and personalise the programming are on the following pages.

We suggest programming via the app as it is much simpler.



CLK

Clock- Set day and time




EVE

Event- Set events parameters




READ

 Readout - Read heating time of a certain period



SET

 Advances Settings- Various Settings



END

End- Back to actual temp page



Sensor selection



Room temp Calibration



Floor temp Calibration



LI - Floor temp limit



Schedule selection



Used for heating or cooling



Adaptive function




Located in home or office

 


Reset to factory settings

CHANGE AND PERSONALISE THE PROGRAMMING











Press and hold  for 3 seconds to enter the menu.

The first screen shown is:



 
CLOCK

Here you can set the day and clock.

- Press the  to enter the day setting
- Press the  or  to set day.
- Press the  to enter the hour setting
- Press the  or  to set hour
- Press the  to enter the minute setting
- Press the  or  to set minute
- Press the  to go back to the main screen

















* If the thermostat is WiFi version, it will update time automatically after connecting to WiFi.

The next screen shown is:



EVENT

Event settings can set and change the programming. In Auto Mode, the thermostat runs according to the programming of the events. On the Clock interface, Press the up or down arrow to select EVE.

- Press the  to enter event setting
- Press the  or  to select a day or end then click 
- Press the  or  to select an event symbol. i.e Wake, Leave, Back, Sleep (see page 8)
- Press the  to select events start time
- Press the  or  to set hour of starting time
- Press the  to enter the minute setting
- Press the  or  to set the minute of starting time
- Press the  to enter the temp setting
- Press the  or  to set the temp to the minimum of 5 degrees
- Press the  to back to the day selection, and repeat for each day.


* If you want to back to the main screen, go back to the 'day' selection and select end.

READOUT




READOUT counts the heating time (in percent) within a certain period.

On the Clock screen, press the up or down arrows to select read.

Press the  to enter the day setting

 
Press the up or down arrows to select read

Press the  to enter readout, the thermostat will show the heating time of the previous day

Press the up or down arrows to select 1 day, 30days, 365 days, it will show the heating time within the certain period

Press the  to go back to the main screen.


ADVANCED SETTINGS




The thermostat provides advanced settings to suit various special situations.

These are normally set by technicians during initial installation.

On the clock Screen, Press the up or down arrows to select SET.

Press the  to enter advanced settings.

Each setting can be accessed by pressing  and parameters adjusted by pressing the up or down arrows. More details on these settings are on the following page.

OPEN WINDOW DETECTION

This function only works when room sensor or both sensor is selected (refer to page 7). The thermostat with this function will shut off automatically for 15 min when the window opens, as it can detect that the room temp plummets

ERRORS

E1: Room-in sensor error.

E2: Floor sensor error.





 



 
E4: Room-out sensor error



PROGRAMMING:

Default setting

Other programming Options

| | | Default setting | Other programming Options |
|----|--|------------------|--|
| 1. |  Sensor selection | 00: Floor sensor | There are 5 options: 00 Floor sensor: run by floor sensor (default and recommended). 01 Room-in sensor: run by built-in room sensor. 02 Room-in sensor and floor sensor: run by built-in sensor with floor temp limit. 03 Room-out sensor: run by external room sensor. 04 Room-out sensor and floor sensor: run by external room sensor with floor temp limit. |
| 2. |  Room temp Calibration | 0.0 C | -5.0C--5.0C calibrate the temp detected by room sensor |
| 3. |  Floor temp Calibration | 0.0 C | -5.0C--5.0C calibrate the temp detected by floor sensor |
| 4. |  LI - Floor temp limit | 35.0C | 20.0C--50.0C if you choose both sensors, floor temp limit must be set to protect floor |
| 5. |  Schedule selection | 01: 5+1+1 | 00: 07 (Different settings for each day of the week) 01: 5+1+1 (5days from Mon to Fri have the same events, Sat and Sun can be set differently.) |
| 6. |  Used for heating or cooling | 00: Heating | 00: Heating 01: Cooling heating or cooling |
| 7. |  Adaptive function | 01: No | 00: Adaptive- after several days of installation and use, Adaptive function ensures that the required temp has already been reached when the next event begins 01: No |
| 8. |  Located in home or office | 00: Home | Located in the home or office: 00: Home 01: Office |
| 9. |  Reset to factory settings | 00: No | 00: No 01: Reset- all parameters are restored to default settings |

DIMENSIONS (MM)

