


Hotwire In Screed Installation Manual

**Please read this instruction manual.
It includes important information that
will assist you and save you
time and money such as,**

*To calculate the wire spacing start with the
M2 of the area to be heated.*

*Multiply this by 1000. Then divide this
answer by the length of the element. The
answer will be the space at which the
element should be laid.*

**See page 5 for further details.*

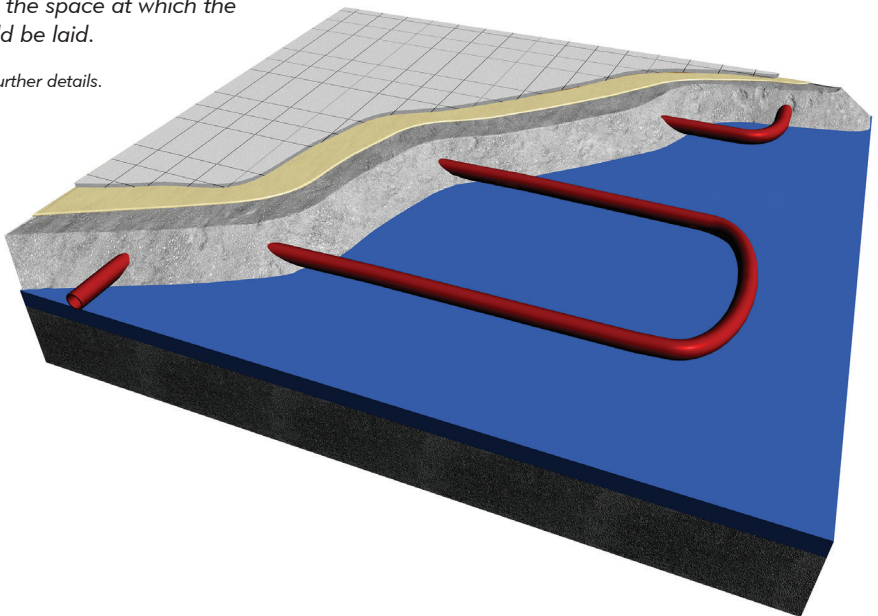

Contents

Step 1 Read This Manual	Page 3
Step 2 Pre wire or “Rough In”	Page 3
Step 3 Floor Preparation.....	Page 3
Step 4 Cable Spacing	Page 3
Step 5 Plan the installation	Page 4
Step 6 Check the element.....	Page 4
Step 7 Element Spacing	Page 5
Step 8 Roll out Element	Page 6
Step 9 Half Way	Page 6
Step 10 More Tape.....	Page 6
Step 11 Install the Floor Probe	Page 7
Step 12 Pull Cables to Power Supply Contents	Page 7
Step 13 Connect Continuity Alarm	Page 7
Step 14 Take a picture.....	Page 8
Step 15 Finished	Page 8
Step 16 Notice to Tilers	Page 8

Step 1 Read This Manual

Please read this manual. It includes everything you need to know to successfully install Hotwire.

Incorrect installation of Hotwire may lead to any warranty claim being denied.

In some States and Territories of Australia the installation of Hotwire Under Tile Heating must be performed in its entirety by a licensed electrical contractor. Whist in others a licensed contractor is only required for the connections to the thermostat. Please check with your local electrical authority or Electrical Contractor to verify the requirements applicable to your State or Territory.

The Hotwire element cannot be cut, shortened or lengthened in any way.

Note: Water Proofing

It does not affect Hotwire whether the water proofing is installed under the screed or on top of the screed. Please check with the manufacturer of the water proofing as to their specifications.

Step 2 Pre wire or "Rough In"

Three things are required before Hotwire can be installed. Please see the diagram.

1: Power supply. You will need power capable of running the Hotwire element you are installing.


2: Flush Box. A vertically flush box will need to be installed. This is a standard light switch / power point plate.

3: Draw Wire. You will need a draw wire through the wall cavity or chased into wall (if brick) and run through conduit.

Mount Flush Box Vertically.

Provide power suitable for load of element to flush box.

Insert draw wire from flush box to floor. This will enable you to pull the coldtails to the thermostat.

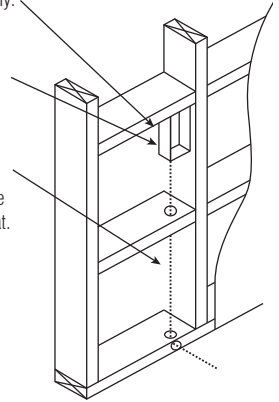

Step 3 Floor Preparation

The floor needs to be completely clean. Sand, lumps of gyprock glue etc will affect your Hotwire installation. So make sure you clean the floor well. Sweep up all the dust, a once over with the vacuum is also a good idea if you have one handy. we also recommend you use a spray adhesive for added strength when fixing down your cable.

Step 4 Cable Spacing

This is really important to an excellent Hotwire installation, so please read this carefully.

Calculate the EXACT m2 of the area to be heated and multiply it by 1000 (this is to bring the measurement to square millimeters). Then divide that answer by the length of the element. This is printed on the side of the spool. The answer will be the cable spacing and should be between 75 and 120 mm. If your answer is outside this check your measurements again as you have made a mistake or have the wrong element. If this is the case do not proceed with the installation.

$$\text{Cable Spacing} = \frac{\text{M2 of floor} \times 1000}{\text{Length of Cable}}$$

The above formula is a good guide. Replace with this measurement is C to C (centre to centre) of the cable so take off 7-8 mm from the calculation to get the exact space between each run.

It is a good idea to cut a jig to the size you need it rather than use a tape measure the whole time. A off cut of wood is fine, in the picture we used an off cut of electrical cable.




Step 5 Plan the installation

This is a step where you can come undone if you don't plan properly.


The Hotwire element CANNOT be cut or shortened in any way. So have a look at the room and work out what is the most logical and simple way to run the cable around that room. You want to be doing as many long runs as possible.

Try and leave the longest wall to last. That way if you have a little too much or too little cable left you can make an easy adjustment by coming a bit further away or going right up close to the wall. Neither option will affect the heating of the room in any way.

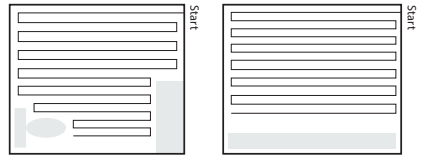

Bathroom

Living Area

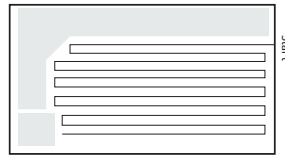

Kitchen

Step 6 Check the element

Before installing the element it is always a good idea to ensure it has not been damaged during transit. We check every element before it leaves our warehouse but there is the possibility that it may get damaged by a courier.

If you have a multimeter then you can check the cable against the following table.

If you don't have a multimeter don't panic we have you covered too.

m2 (min)	m2 (max)	Watts	Cable Length	Ohms	Amps
1.0	1.3	200	11.8	264.50	1.15
1.3	2.0	300	17.65	176.32	0.77
2.10	3.10	450	26.47	117.53	0.51
3.20	4.20	600	35.29	88.23	0.38
4.30	5.40	750	44.12	70.59	0.31
5.50	6.30	900	52.94	58.76	0.26
6.40	7.50	1050	61.76	50.64	0.22
7.60	8.40	1200	70.59	43.77	0.19
8.50	10.80	1500	88.24	35.30	0.15
10.90	12.50	1800	105.88	29.65	0.13
12.60	16.0	2100	123.53	24.71	0.11
16.10	17.0	2400	141.18	22.59	0.10
17.10	21.0	3000	176.47	17.65	0.08
21.10	25.0	3600	211.76	14.82	0.06

In the Hotwire Box is a continuity alarm. It is a small black box with 3 cables coming off the end.

- 1: Remove small white sticker over "On / Off" Switch
- 2: Fix the Black clip to the Brown wire of the element.
- 3: Fix the Red clip to the Blue wire of the element.

- 4: Fix the Green clip to the remaining wire.
- 5: Switch the tester on.
- 6: A Red Light then shows that the tester is on and working.
- 7: If you have a fault the tester will start "Beeping"

If the alarm does not beep you are good to keep installing. There is also another use for the alarm so keep it handy, more about that after the element is down.


Step 7 Element Spacing

There are two main options for fixing the element in place. If the subfloor is clean and dust free the provided tape may be enough. If not fixing the element to a wire mesh is a great option. This product can be purchased from Hotwire or is available at most hardware stores.

We recommend,

Whites Cage Mesh 90cm x 10m x 25mm x 25mm

Use small cable ties to hold the element in place.

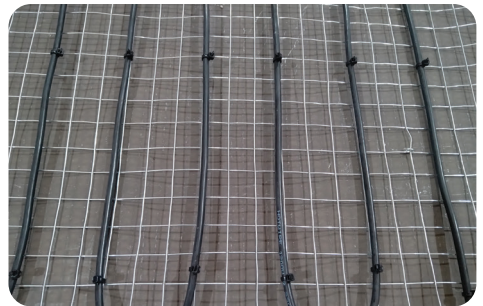

Step 8 Roll out Element

You are now ready to start rolling out the element and sticking it down.

There is 3 meters of "Cold Tail" at the end of the element, you will notice a join between the cold tail and the thinner element wire. No part of the element or cold tail join can be in the wall cavity. This is dangerous and will void warranty.

Start spreading the element around the floor using the jig you cut earlier

Step 9 Half Way

You will notice a half way marker. It is little piece of tape around the element. When you see this stop and look at where you are up to. If you are not sure if you are half way through the floor check your measurements. Measure the remaining m² and use 50% of the cable length to check if you are on target. If you are a little more or under half way you can spread the cable runs out or close them up a bit.



Step 10 More Tape

Stick any proud bits of element down. Some of the loops may have popped up a bit. You will also need to run a strip of tape right across the whole floor to ensure the cable does not get moved or damaged by other trades. It is a good idea to run right across the floor every meter.

Step 11 Install the Floor Probe

If using the Hotwire fully programmable thermostat you will now need to install the floor probe. If you are not sure check the small white box in the Hotwire box your product came in. The floor probe is a white cable that will be coiled in the bottom of that box.

Stick the probe to the floor. Make sure you don't stick any tape over the end of the probe. It is also critical to ensure that the probe is exactly half way between two cable runs. I.e. If your measurement was 100 mm. Ensure the end of the probe is 50 mm from one run of element and 50 mm from another.

The Thermostat sensor should be run in a conduit so it can be easily replaced if required. Warranty claims on probes will not be accepted if not laid in a conduit.

Step 12 Pull Cables to Power Supply

Tape the ends both cables (cold tail and the floor probe) to the draw wire and gently pull the cable up the wall cavity or through the conduit to the position of the power supply.

No part of the element can be run inside the wall. The entire cold tail join must be buried under the floor.

Step 13 Connect Continuity Alarm

Connect the continuity alarm again. This will ensure you have not damaged the cable during installation. It will also monitor the cable while you are laying of the screed.

- 1: Remove small white sticker over "On / Off" Switch (if you haven't already)
- 2: Fix the Black clip to the Brown wire of the element.
- 3: Fix the Red clip to the Blue wire of the element.
- 4: Fix the green clip to the remaining wire.
- 5: Switch the tester on.
- 6: A Red Light then shows that the tester is on and working.
- 7: If you have a fault the tester will start "Beeping" If there is no "Beep" you can continue with the installation
- 8: If the beep sounds at any time, before or during installation STOP IMMEDIATELY as this means that damage has occurred to the element and you will need to repair it before continuing.
- 9: Once you have finished the installation and before you start tiling reconnect the tester as above & turn on.
- 10: Keep the tester on until your tiling is complete.
- 11: If the tester light turns off you will need to replace the batteries.

It is a good idea to tape the alarm up with the tails so that it is not in your way while you finish the installation.



Step 14 Take a picture

Take a picture of the element layout. If there is ever a problem it will be handy to know how the element has been installed across the floor.

Step 15 Finished

Admire your work. You have just installed Hotwire.


Connecting systems over 20 m² or 3kw

Hotwire Thermostats are rated from 16 - 25 amps. Simply follow the instructions in the box with the thermostat to connect the heating elements and the floor sensing probe.


If you have a system that is over 3kw you may need to install a contactor in the switch-board. If you are installing a 6kw system, you definitely will need a contactor and should also install a 32 mm conduit from the Thermostat to the floor.

Please refer to the back of the Thermostat to confirm the capacity of the Thermostat as different models have different ratings.


We suggest installing a 25a, 32a or 40a contactor depending on the circuit size in the switch board. Please consult your Electrician to ensure you have the right preliminary electrical work completed.

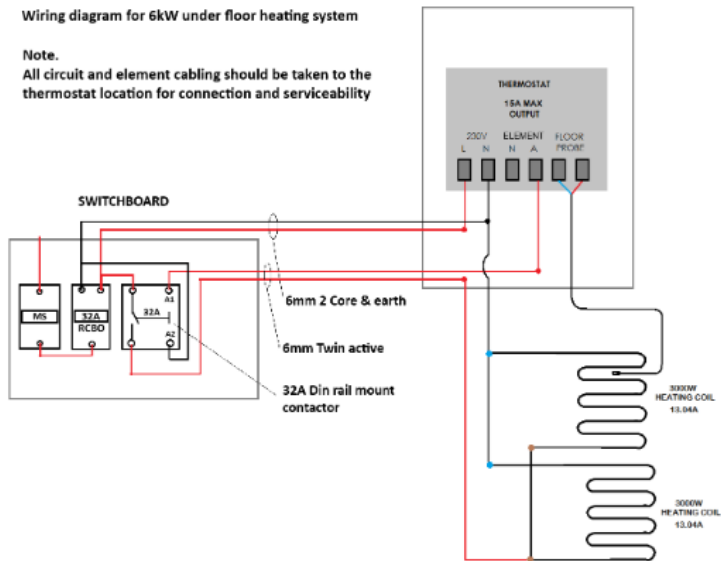

WIRING DIAGRAM FOR
1 X 32A CIRCUIT

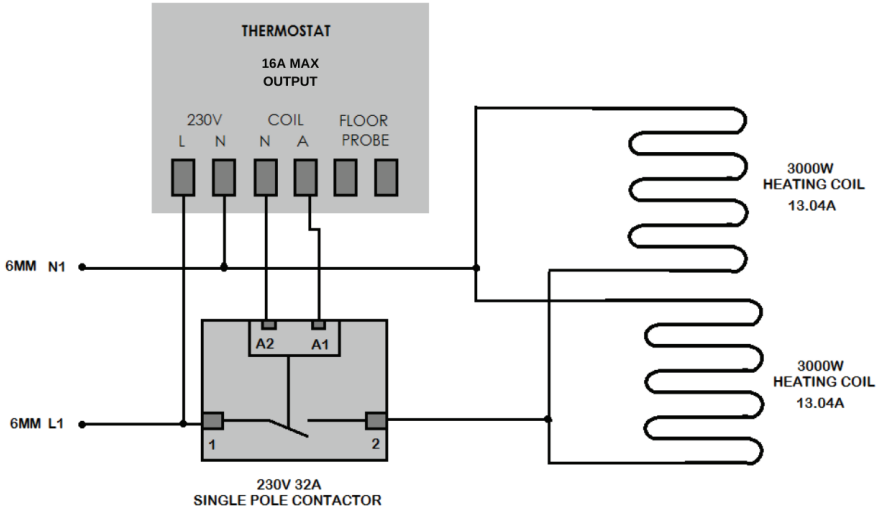

WIRING DIAGRAM FOR
2 X 16A CIRCUITS

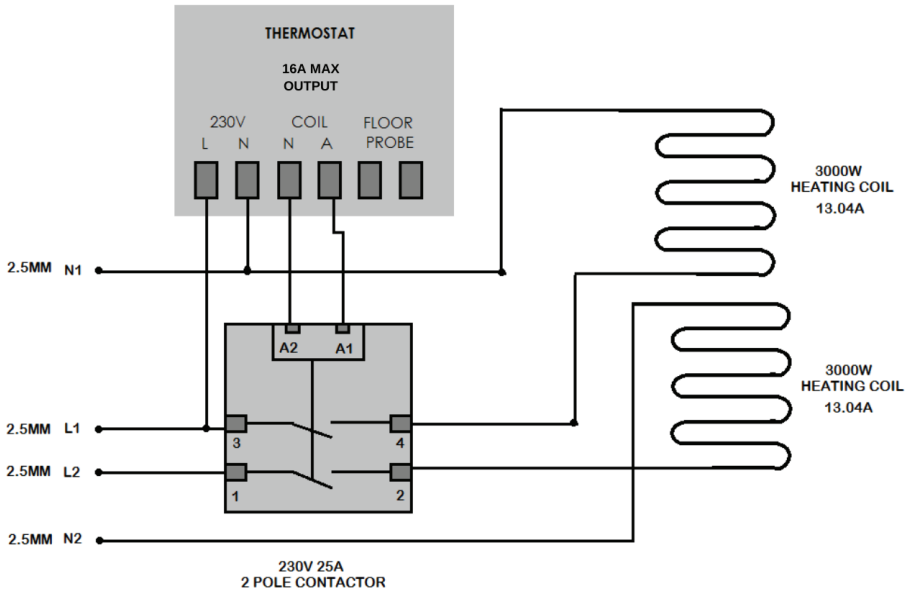

Step 16 Notice to Tilers

Inside this manual is a yellow flier pointing out to tilers that Hotwire has been installed. Stick it to the wall in a prominent place. The flier also has a place to write your name and number for them to call with any questions.

Materials Check List

Provided from Hotwire:

Hotwire Element:
Thermostat: (including a floor sensing probe)
Cloth Tape
Continuity Alarm
This Manual
Relay if required

You will also need,

Broom
Tape Measure

Electrical Connection of the Thermostat

All circuit wiring supply and thermostat connection must be undertaken in accordance with the current electrical standards and regulations. The heating units must be separated from other heating sources. The maximum thermal resistance between the heating element and the room = 0.4 m sq K/wAll electrical supply circuits must be RCD (Residual Current Device) protected with a rated residual operation current not

exceeding 30 mA.

Operation

Wait 7 days for the tile adhesive to dry before you turn your heating on. Once the heating is commissioned the initial heat up time will vary depending on the sub floor type, (concrete or timber) insulation, thermal characteristics and ambient temperature. Performance will improve with use.

Do's and Don'ts

DO's

Carefully read the installation instructions prior to commencing your installation.

Check the element is working before you start.

Ensure the surface is clean and clear of obstructions.

Pre plan your element layout and stay with the recommended element spacing.

Maintain even element spacing.
Protect the heating element from damage at all times.

Plan required pre work and drilling before you lay the element.

Take care when tiling to make sure that you do not damage the element.

Ensure that enough tile adhesive is used so not to leave gaps or voids under the tiles.

DON'Ts

Don't cut or shorten the heating element.

Don't commence installation on concrete floors that are not fully cured.


Don't allow the heating elements to cross or touch.
Don't allow traffic over the heating element until the flooring has been laid.

Don't remove the heating element off the pool except during installation.

Don't store tiles sharp or heavy objects on the elements while tiling.

Don't switch on the heating until the tile adhesive has fully cured. Don't install the element over uneven floor surfaces.

In Screed Heating Technical Information

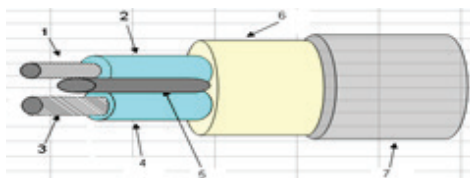

General:

- 1 Multi Stranded Heating Conductor (0.25mm -0.68)
- 2 Conductor Insulation 0.5mm RTI XPLE (natural)
- 3 Return Conductor AWG 20/7/28 TPC (0.5mm²) : AWG 19/10/28 TPC (0.75mm²).
- 4 Return Conductor Insulation 0.5mm RTI XPLE (natural)
- 5 Earth Conductor 1.0mm TPC (0.9mm²).
- 6 Aluminium Mylar Tape 15mm Width & 65 Micron Thickness.
- 7 Outer Insulation 1.5mm RTI High Temp PVC.

Working Temperature 105 Deg C.
Working Voltage 230V AC, 50Hz.
Cable Dia 6.0mm.
Cold Tail 3.5m

Insulation:

A resistance R factor of 1.7m² / 0C / w for heated floors.

High density polystyrene of fiber glass insulation materials should be used. (NZ 4218P, BRANZ 292, 344)

Perimeter 1m width insulation should be fitted.

Footnotes

The lowest ambient temperature that the heating element can be installed equals -80C

The minimum radius for bending the heating element equals 40 mm. The thickness of covering materials should be at least 5mm.

Contact the manufacturer for advice if materials other than those recommended are used. The appliance is not intended for use by young children, or infirm persons, without supervision.

Young children should be supervised to ensure they do not play with the appliance. Laws in different states and territories of Australia differ. Please check with your local electrical authority if someone other than a licensed Electrician is able to lay the cable in your state or territory. In all states and territories all electrical connections including the thermostat must be carried out by a registered electrician.

All circuit wiring supply and thermostat connection must be undertaken in accordance with the current electrical standards and national wiring regulations.

The heating units must be separated from other heat sources.

CUSTOMER WARRANTY AGAINST DEFECTS FOR HOTWIRE IN SCREED HEATING PRODUCTS

Turnkey International Pty Ltd (ABN 36
086 830 766 trading as Hotwire Heating
(Hotwire)

About Our Products

Hotwire Heating products are made of high-quality heating cable with FEP (teflon) insulated conductor, braided screen and a black PVC outer sheath providing invisible, comfortable, fast, dust-free, quiet and energy-saving floor heating solution.

All Hotwire Floor Heating systems include:

- Heating Element
- Fully programmable Touch Screen Thermostat
- Alarm
- Tape
- Installation Manual
- Temperature Probe

Wi-Fi and Dual Thermostats are available as an upgrade.

Hotwire Heating warrants that all of our under the floor heating cables are free from defects in material and workmanship in their manufacture. Our under the floor heating cables are carefully tested, including resistance measurement and 1500V insulation test (high voltage test) before their shipment, and are well packed to avoid damage during transit.

Availability Of Installation And Servicing

Hotwire Heating products are provided based on the measurement of the floor You are wanting to cover. If You need an installer, we can help there too. Hotwire was the largest network of qualified floor heating installers in Australia. Simply look up the closest installer to You on our "Installations" page.

AUSTRALIAN CONSUMER LAW WARRANTIES

Hotwire Heating's Goods come with guarantees that cannot be excluded under the Australian Consumer Law (ACL).

Under ACL, Consumers who have been supplied our Goods by a builder, a third party, or who have purchased a home in which our Goods are installed are entitled to access to repair/ replacement parts, a guarantee that the Goods are of acceptable quality and the express warranties below. These Consumers are not entitled to the same rights as a Consumer who has purchased Goods directly from Hotwire Heating.

EXPRESS WARRANTIES

Hotwire Heating provides support to Consumers (regardless of whether they purchased Goods directly from Hotwire Heating or not), in respect of Goods supplied by Hotwire Heating. This may involve Hotwire Heating attending Your property to assess the issues with the Goods and if the issue is a major defect of Goods or a manufacturing fault (subject to Hotwire Heating's Terms and Conditions and the

provisions of this Consumer Warranty), then Hotwire Heating will attend to rectification of the issue, at the cost of Hotwire Heating. If the issue is not a major defect of Goods or a manufacturing defect with the Goods, then Hotwire Heating may be able to assist You in resolving the issue, and will discuss with You what can be done and the costs associated.

Often, issues arise from the Goods having not been installed by a licenced electrician, or having been installed incorrectly. Hotwire Heating supplies an Installation Manual to all purchasers at the time of sale of the Goods and advises purchasers that the Goods must be installed by a licenced electrician in accordance with the Installation Manual. If the Goods are not installed by a licenced electrician in accordance with the Installation Manual, this will void any warranty applicable to the Goods. In these circumstances, Hotwire Heating may be able to assist the Consumer in any issues with the Goods (at the cost of the Consumer), however, Hotwire Heating is not liable for issues arising from installation of the Goods either:

- By a person who is not a licenced electrician; or
- Resulting from failure to install the Goods in accordance with the Installation Manual.

Extended Warranty

Hotwire Heating undertakes to repair or, at its sole discretion, to replace any part of the Goods supplied by Hotwire Heating which are found to have a manufacturing defect for a period of 10 years from the date of purchase, save that any warranty in relation to the thermostat and the controller of the Goods is limited to 2 years.

Your obligations

In order to make a claim on the Goods and Services of Hotwire Heating, either under the ACL or the Extended Warranty provided herein, the Consumer must cease using the Goods immediately, contact Hotwire Heating from the outset of the issue, prior to engaging any tradespersons or attempting to repair the Goods, and must follow any reasonable

instructions or provide any reasonable information requested by Hotwire Heating.

Any repairs or replacement of the Goods must be performed by Hotwire Heating (or its authorised contractors). Hotwire Heating shall not be responsible for any repairs performed to the Goods without the knowledge or authority of the Hotwire Heating.

EXCLUSIONS

Hotwire Heating does not provide Statutory Warranties or Extended Warranties in any of the following circumstances:

1. The Purchaser/Consumer fails to comply with Hotwire Heating’s Installation Manual in relation to the fitting, installation and use of the Goods;
2. The Goods installed by non-Hotwire Installer or a person who was not a licenced electrician;
3. Unauthorised repairs or alterations made to the Goods;
4. Goods being subjected to improper voltage or power surges, misused, damaged by accident, force of nature or any other acts beyond Hotwire Heating’s reasonable control;
5. The Goods being improperly installed or installed other than strictly in accordance with the Installation Manual (other than where such improper or other installation is carried out by an Authorised Installer);
6. The Consumer failing to provide the required document called “Hotwire Element Testing” upon request;
7. The Consumer failing to provide Proof of purchase (clearly stating the date of purchase);
8. Where there is a failure to complete the Hotwire Element Testing process, as set out in the Hotwire Heating Element Booklet; or
9. Calls to replace batteries, programme or re-program thermostats and/or controllers, replace fuses or reset residual current devices or circuit breakers.

The total maximum liability of Hotwire Heating in all cases (save for those under ACL) is limited to replacing the Goods, repairing the Goods or repayment of the purchase price of the Goods, whichever is the lesser.

Hotwire Heating will not be liable for any incidental expenses (including costs of inspection, testing, removal, reinstallation, storage or transportation), any other charges, costs or expenses of the Consumer or any third party, personal injury, incidental damages, consequential losses, loss of profit, costs of business interruption, loss of opportunities or any like claims whatsoever arising from any use of, or incidental to, the Goods or their failure to operate.

If any component or part of the Goods is manufactured by a third party or supplied to Hotwire Heating by a third party, any warranty offered by Hotwire Heating in relation to the Goods or a component part of the Goods will be limited to Hotwire Heating's right of redress (if any) against the manufacturer or supplier of the component part of the Goods.

How to claim under warranty

Claims under warranty must be made by contacting the Hotwire Heating on the telephone number, email or postal address below:

Hotwire Heating

Factory 1 / 7-9 Newcastle Rd,
Bayswater Vic 3153

Telephone: 1300 797 060
Email: info@hotwireheating.com.au

NOTES

15-16

Hotwire (Australia Head Office)
Factory 1 / 7-9 Newcastle Rd
Bayswater Vic 3153

Phone 1300 468 947
www.hotwireheating.com.au

 **Hotwire**
FLOOR HEATING

1300 468 947
hotwireheating.com.au

Copyright 2023 Hotwire IP Pty Ltd. All rights reserved. This article may not be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of the copyright holder.

16-16

Hotwire (Australia Head Office)
Factory 1 / 7-9 Newcastle Rd
Bayswater Vic 3153

Phone 1300 468 947
www.hotwireheating.com.au

 **Hotwire**
FLOOR HEATING